 


DENVER®

**TVD-1418**

**14 "(37cm) COLOUR TELEVISION  
WITH DVD PLAYER**

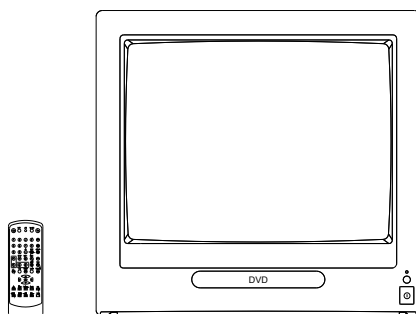 


**OPERATION MANUAL**




# Contents

<b>Safety Precautions.....</b>	2 - 4	<b>Video Setup</b>	
<b>Antenna connection.....</b>	4	Component .....	14
<b>Location of Controls (Main Unit)...</b>	5	Sharpness .....	14
<b>Remote Control Units.....</b>	6	Brightness .....	14
<b>TV Reciever Operation</b>		Contrast .....	14
<b>Tuning Operation</b>		<b>Preference Setup</b>	
Auto Search .....	7	TV Type .....	15
Manual Search .....	7	Audio .....	15
Adjusting Program .....	7	Subtitle .....	15
Deleting Program .....	7	Disc Menu .....	15
<b>Exchange Program.....</b>	8	Parental .....	16
<b>Picture Operation .....</b>	8	Password .....	16
<b>Sound Operation.....</b>	8	Default .....	16
<b>Time Operation</b>		<b>DVD Operation</b>	
Set Clock .....	8	Play Discs .....	17
Set Off , On Time and Program .....	9	Pause Mode .....	17
Set Remind Time and Program .....	9	OSD .....	17
Set Sleep Timer.....	9	DVD Menu Play .....	17
<b>Setup Operation</b>		Select With Number Button .....	17
Set OSD Language .....	9	Audio Mode .....	17
Set Background .....	9	Fast .....	17
Set Black Stretch .....	10	Slow Play .....	17
Set Auto Volume Limit .....	10	Repeat Mode .....	17
<b>Teletext Operation</b>		Repeat A-B.....	18
Enter Teletext Mode .....	10	Subtitle .....	18
Browse Pages .....	10	Angle .....	18
Function Buttons Operation .....	10	Goto .....	18
<b>Operating With Remote Control</b>		Display (Resume Time).....	18
Program Selection .....	11	Resume Play.....	18
Standby Button .....	11	Zoom .....	18
Mute Button .....	11	Program Mode .....	19
Display Button .....	11	Picture CD .....	20
AV Button .....	11	<b>Specifications .....</b>	21
PP Button .....	11		
Effect Button .....	11		
<b>DVD Player Operation</b>			
<b>General Setup</b>			
TV Display.....	12		
Angle Mark.....	12		
OSD Language.....	12		
Digital Output.....	13		
Screen Saver.....	13		
<b>Analog Audio Setup</b>			
Downmix.....	13		
<b>Dolby Digital Setup</b>			
Dual Mono .....	13		
Dynamic .....	14		

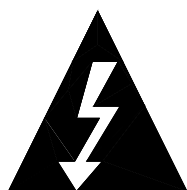


## CAUTION

 **RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

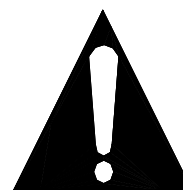


**CAUTION: TO PREVENT ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

 **The graphic symbols on the back cover of the set mean the following:**

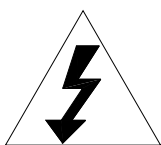

 The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

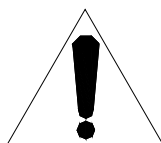

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

## **INSTALLATION**

LOCATE the receiver in the room where direct light does not strike the screen. Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing. ALLOW enough space between the receiver and the wall to permit proper ventilation. AVOID excessive warm locations to prevent possible damage to the cabinet or component failure.

## **CONNECTION**

This TV power plug can be connected to 230V~ 50/60Hz, NEVER connect to DC supply or any other power.

 
## **AUTOMATIC DEGAUSSING**

All colour television receivers are sensitive to magnetic influences, usually caused by either moving the receiver from one place to another or using certain electrical appliances near the receiver. This residual magnetism as it is called, sometimes causes distortion which gives rise to "blotchy" areas of colour in the picture. To avoid these effects the receiver incorporates an automatic degaussing circuit which operates for a short while immediately each time the receiver is switched on using the mains switch. This circuit removes any residual magnetism in the metal parts of the picture tube and therefore ensures that each time the receiver is switched "ON" using the Mains switch, the purity of the colours displayed on the screen remain true and lifelike. If the set is moved or faced in a different direction, the mains switch must be switched off at least 10 minutes in order that the automatic degaussing circuit operates properly.

## **CAUTION**

Never replace with any components inside your set, or any other adjustment controls not mentioned in this manual. All television receivers are high voltage instruments. Your PICTURE TUBE is highly evacuated. If broken, glass fragments will be violently expelled. Scratching, shipping or undue pressure is dangerous and should be avoided. When you dust or wipe the PICTURE TUBE FACE or CABINET, the power plug should be pulled out from the socket, then wipe the receiver with a dry soft cloth. All "inside work" on your receiver should be performed only by Professional Service Personnel.

## **DANGER**

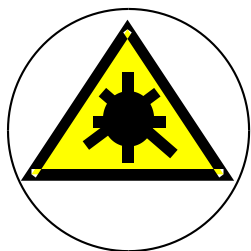

Invisible laser radiation when open and interlock failed or defeated. avoid direct exposure to laser beam.

### **LASER SAFETY**

This unit employs an optical laser beam system in the CD mechanism, designed with built-in safeguards. Do not attempt to disassemble, refer to qualified service personnel.

Exposure to this invisible laser light beam may be harmful to the human eye.

**THIS IS A CLASS-1 LASER PRODUCT. USE OF CONTROLS, OR ADJUSTMENTS OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, MAY RESULT IN HAZARDOUS LASER LIGHT BEAM**

**CLASS 1  
LASER PRODUCT**

Manufactured under license from Dolby Laboratories "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

## **IMPORTANT SAFEGUARDS**

### **PREFITTED MAINS PLUGS**

For your convenience a mains plug has been fitted to this appliance. For your safety please observe the following information.

1. CAUTION: Under no circumstances should the discarded plug be inserted into the mains socket. To prevent a shock hazard carefully dispose of the discarded plug.
2. Do not leave the plug lying around where children might see it.
3. WARNING: To prevent fire or shock hazard do not expose power plug to rain or moisture.

**CAUTION:** DANGEROUS VOLTAGES EXIST INSIDE THIS UNIT DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. DISCONNECT FROM MAINS SUPPLY WHEN NOT IN USE.



 
This symbol means that this unit is double insulated. An earth connection is not required.

## **ANTENNA CONNECTION**


To ensure best receiving effect, use outdoor antenna or cable antenna (CATV). The type and location of antennas will change with places and condition.

Notes:



- \* Connect the outdoor antenna as shown above, and also install a lightning arrester and perform periodical checking and repair.
- \* It is suggested to better use a  $75\Omega$  coaxial cable, to eliminate interference or noise due to improper matching of impedance.
- \* The cable should not be tied together with supply cord.

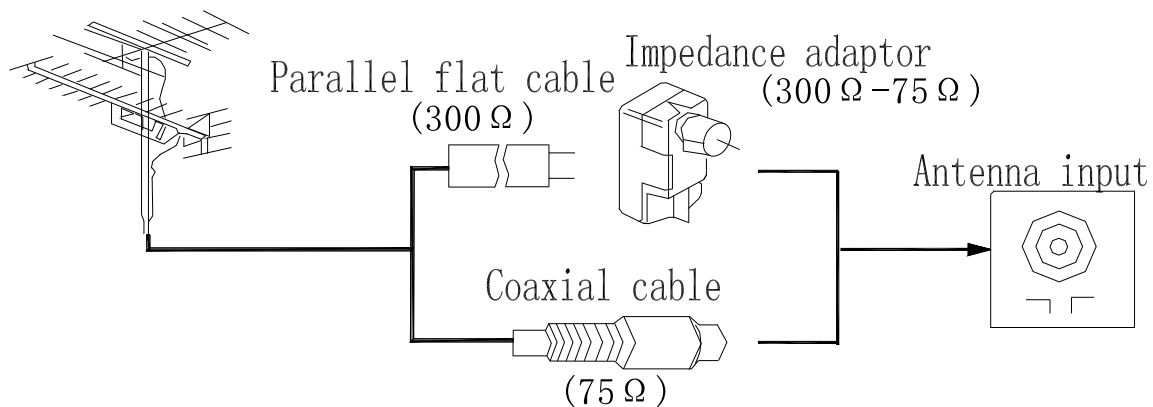

## **LOCATION OF CONTROLS**

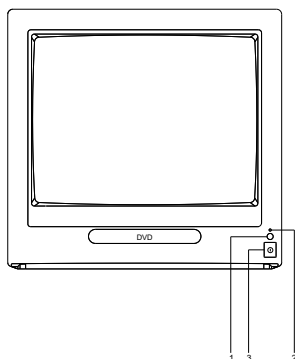 

  1. Remote control receiving window
2. Indicator
3. Main power switch
4. 75 ohm Antenna Socket
5. AV2 in
6. AV out
7. Audio Digital Out Sockets ( For DVD only )
8. Scart1 Connector ( TV input and output )
9. Scart2 Connector ( DVD output )
10. Volume Button(V-)
11. Volume Button(V+)
12. Channel Button(P-)
13. Channel Button(P+)
14. TV/AV
15. Menu Button
16. DVD Play Button
17. DVD Button
18. Open/Close Button
19. AV1 in

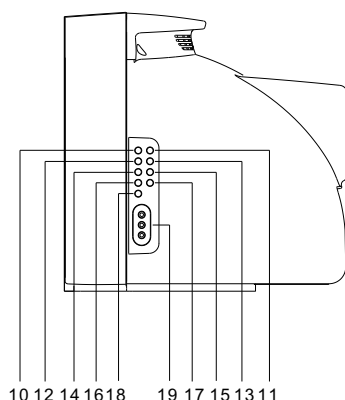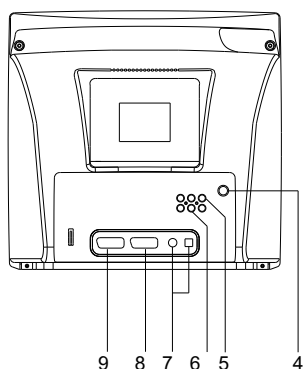

### interface description:

1. Side AV: AV1 signal input in TV mode.
2. Rear AV interface: AV2 signal input and AV signal output in TV mode.
3. SCART1: in TV mode, containing one AV2 signal input, one RGB signal input and one AV output.
4. SCART2: in DVD mode, containing one AV (CVBS) output and one RGB output.
5. Optical fiber: in DVD mode, optical fiber signal (digital and audio) output.
6. Coaxial: in DVD mode, coaxial signal (digital and audio) output.

**Note: If you want to use the DVD mode and AV input mode of the TV set at the same time, please input the audio and video signals from side AV (Av1), instead of from rear AV (AV2 and Scart1).**



## TV RECIEVER OPERATION

Connect your TV antenna to the antenna input socket located on the back of the TV. Push the Main Power Switch, power Indicator will be illuminated. When there is no signal, the TV will require tuning the available TV programs in your area. The operation is as follows:

### Program Operation

#### Auto Search

 
Use the Auto Store method to automatically store into the memory.

This method will store TV programs in order of reception 1,2,3 etc. or all set

1. Press the **MENU** button continuously until TUNE menu is shown .  
or press the **TUNE** button directly in the remote controller, enter the TUNE menu .
2. Press **P- / P+** button until "AUTO SEARCH" is highlighted.
3. Press the **V+** button to start the auto search and store programme.
4. The operation will take a few minutes.

After searching the TV will show the first station stored into preset location 1.



5. Press **P+ / P-** button on the TV set or remote controller to recall the programs stored.

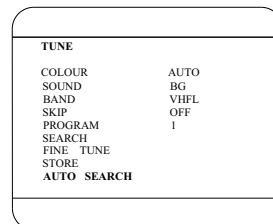

#### Manual Search

Search and store desired programs to designated channel Nos. by manual

  
1. Press the **MENU** button continuously until TUNE menu is shown .  
Or press the **TUNE** button directly in the remote controller, enter the TUNE menu .
2. Press **P- / P+** button continuously until "SEARCH" is highlighted.
3. Press **V+** button to start manual search up, or **V-** button to lower program
4. Press **P+ / P-** button until "PROGRAM" is highlighted.
5. Press **V+ / V-** button and change the channel numbers shown 1-249  
until the correct channel No. is shown that you want to store the TV channel into .
6. Press **P+ / P-** button until "STORE" is highlighted
7. Press the **V+** button to store the TV programme into the selected channel No..
8. Repeat operations 1-6 above to search and store other programmes into the memory.

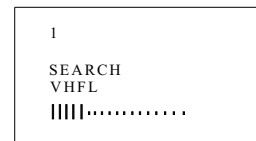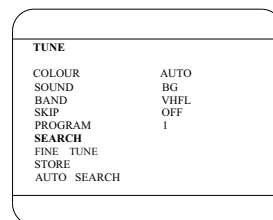

#### Adjusting Program ( Fine Tune )

In areas of poor reception of constant interference, a slight adjustment of the tuning may improve the picture and sound quality .

 
1. Press the **MENU** button continuously until TUNE menu is shown .  
or press the **TUNE** button directly in the remote controller .
2. Press **P- / P+** button continuously until "FINE TUNE" is highlighted.
3. Press **V+ / V-** button all along until the picture and sound are ok .
4. Press **P+ / P-** button until "STORE" is highlighted
5. Press the **V+** button to store the adjusted program .

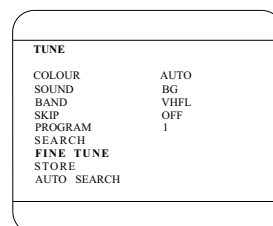

#### Deleting Programs ( Skip ):

If some programs are not required or too bad, you can delete them from the channel list: This operation will be operated in TUNE menu ,

 1. Select and view the station to be erased.
2. Press **P- / P+** button continuously until "SKIP" is highlighted.
4. Press **V+** button and change the state from OFF to ON.
5. Press **P- / P+** button until "STORE" is highlighted
6. Press **V+** button to store the setting.
7. Press **MENU** or **TUNE** button to return to normal TV operation.
8. After you change channel the program will no longer be seen in channel list.

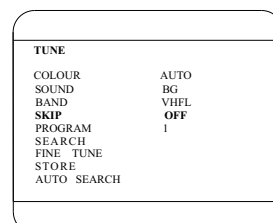



## Exchange Programs

Use this function can arrange the program list to your own's mind .

1. Select **EXCHANGE** menu by pressing menu button continuously.
2. Press **P+ / P-** button to select " PROGRAM 1 "
3. Press **V+ / V-** button to select the first program number that you want to exchange
4. Press **P+ / P-** button to select " PROGRAM 2 "
5. Press **V+ / V-** button to select the program number that you want to exchange with the first one
6. Press **P+ / P-** button to select " EXCHANGE "
7. Press **V+ / V-** button to exchange the two programs

EXCHANGE		
PROGRAM	1	1
PROGRAM	2	2
EXCHANGE		

## Picture Operation

Press the **MENU** button on the remote controller (or on the TV set) once ,  
or press the **PICTURE (PIC)** button directly enter the **PICTURE** menu.

There are four items in this menu: CONTRAST , BRIGHTNESS , COLOUR , SHARPNESS

1. Press **P+ / P-** button to select the items you want to adjust.
2. Press **V+ / V-** button to adjust the picture effect .  
\* In NTSC mode , the item " HUE " can be selected and adjusted .

PICTURE	
CONTRAST	32
BRIGHTNESS	32
COLOUR	32
SHARPNESS	32
.....	

## Sound Operation

Press the **MENU** button on the remote controller (or on the TV set) twice ,  
or press the **SOUND** ( ) button directly enter the **SOUND** menu .

There are five items in this menu : VOLUME , BASS , TREBLE , BALANCE , SURROUND

1. Press **P+ / P-** button to select the items you want to adjust.
2. Press **V+ / V-** button to adjust the sound effect .

SOUND	
VOLUME	2
BASS	32
TREBLE	32
BALANCE	0
SURROUND	OFF
.....	

## Time Operation

With this function, you can watch the preset program at preset time ,  
and turn on or off TV at preset time .

For example , it is 16:28 now , you want to watch program 10 at 17:00 ,  
and turn it off at 23:30 , then turn it on at 7:30 the next morning  
and show program 8 . The operation is as follow :

Press **MENU** button on the remote controller (or on the TV set) third ,  
or press the **TIME** button directly enter the **TIME** menu .

TIME	
CLOCK	--:--
ON TIME	--:--
ON PROG	1
OFF TIME	--:--
SLEEP TIMER	0
REMIND TIME	--:--
REMIND PROG	1

### Set Clock

1. Press **P+ / P-** button to select the " CLOCK "  
then press **V+ / V-** button to set hour at 16 ,
2. Press **P+ / P-** button again to select minute ,  
and press **V+ / V-** button to set minute at 28 .

TIME	
CLOCK	16:28
ON TIME	--:--
ON PROG	1
OFF TIME	--:--
SLEEP TIMER	0
REMIND TIME	--:--
REMIND PROG	1

### Set Remind Time and Program

1. Press **P+** / **P-** button to select the "**REMIND TIME** "  
use **V+** / **V-** button to set hour at 17 ,  
then select minute and set it to 00 .
2. Press **P+** / **P-** button to select the "**REMIND PROG** "  
use **V+** / **V-** button to set the program number as 10 .

TIME	
CLOCK	16:28
ON TIME	--:--
ON PROG	1
OFF TIME	--:--
SLEEP TIMER	0
REMIND TIME	17:00
REMIND PROG	10

### Set Off time ,On time and Program

1. Press **P+** / **P-** button to select the "**OFF TIME** "  
use **V+** / **V-** button to set hour at 23 ,  
then select minute and set it to 30 .
2. Press **P+** / **P-** button to select the "**ON TIME** "  
use **V+** / **V-** button to set hour at 7 ,  
and then select minute and set it to 30 .
3. Press **P+** / **P-** button to select the "**ON PROG** "  
use **V+** / **V-** button to set the program number as 8 .

TIME	
CLOCK	16:28
ON TIME	07:30
ON PROG	8
OFF TIME	23:30
SLEEP TIMER	0
REMIND TIME	17:00
REMIND PROG	10

### Set Sleep Timer

1. Press **P+** / **P-** button to select the "**SLEEP TIMER** "  
use **V+** / **V-** button to set sleep time by turn :  
0 ,10, 20, 30 ,40 .....180 ( Minute )

TIME	
CLOCK	16:28
ON TIME	07:30
ON PROG	8
OFF TIME	11:30
<b>SLEEP TIMER</b>	<b>0</b>
REMIND TIME	17:00
REMIND PROG	10

### Setup Operation

Press **MENU** button on the remote control ( or on the TV set ) continuously  
or press the **SET** button directly to enter the **SETUP** menu

#### Set OSD language

1. Press **P+** / **P-** button to select the "**ENGLISH**"
2. Press **V+** / **V-** button to select the language you want

SETUP	
<b>ENGLISH</b>	
BLUE BACK	ON
BLACK STRETCH	ON
AVL	ON

 
#### Set Background

1. Press **P+** / **P-** button to select the "**BLUE BACK**"
2. Press **V+** / **V-** button to make the blue background **ON** or **OFF** .  
\* When "**BLUE BACK**" is **ON** , the screen will be blue , if no signal input .  
\* When "**BLUE BACK**" is **ON** , the TV set will " standby " automatically in 5 minutes ,  
if no signal input all the time .

SETUP	
ENGLISH	
<b>BLUE BACK</b>	<b>ON</b>
BLACK STRETCH	ON
AVL	ON

### Set Black Stretch

1. Press **P+** / **P-** button to select the " BLACKSTRETCH "
  2. Press **V+** / **V-** button to make the black stretch **ON** or **OFF** .
- \* This function is used just to improve the effect of the picture

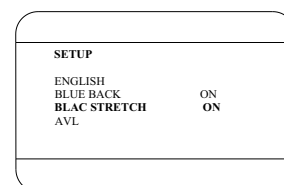

### Set Auto Volume Limit

1. Press **P+** / **P-** button to select the " AVL " .
  2. Press **V+** / **V-** button to make the blue background **ON** or **OFF** .
- \* When "AVL " is **ON** , the output power of the loudspeaker can remain constant , if the volume is too large to distortion .

 
## TELETEXT OPERATION

### Enter Teletext Mode

In TV mode, press the **TXT** button to enter the teletext mode directly .

\* Press the **TXT** button twice to exit the teletext mode.

\* After entering the teletext mode, the screen will display the first page of the teletext ; if there is no teletext signal , the screen will display the blank page as show below:

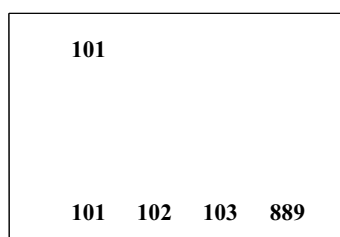

### Browse Pages

After entering the teletext mode , using the following methods to browse all of the pages :

1. Press the **NUMERIC** button , enter any of the pages .
2. Press the **P+/P-** button , browse the pages one by one .
3. Enter the corresponding pages by pressing the **four coloured button** on the remote controller corresponding to the four colour page numbers at the lower of the screen .
4. During browsing , press the **TUNE** button to go back to the index page .
5. During browsing , press the **SIZE** button to enlarge the teletext pages .
6. Press the **E/W** button , switch between the Eastern and Western European display language .
7. Press the **HOLD** button to browse the current page for a long time .

### Function Button Operation

In teletext mode , there are some special function button .

1. Press the **MIX** button , mix the teletext page with current TV program , i.e. f or semitransparent for teletext display .
2. Press the **REVEAL** button display the current TV program in teletext mode . At this time , although the TV is displayed , no TV operation is possible , Press this button twice to resume to the normal teletext display .
3. Press the **CANCEL** button , exit the teletext display mode , and shift the teletext page to background operation .
4. If the teletext signal has sub-code information , press the **SUBC** button to enter the sub-code pages .

## **OPERATING WITH REMOTE CONTROL**

### **Program Selection:**

#### **1. Program Number Up and Down**

Press the "P+" or "P-" button to select a higher or lower program number.

#### **2. 0 -9 Digital Button**

To select TV stations using program numbers 0 -9, selecting program number will be shown in the left corner of the top of screen.

#### **3. Two Digital Program Number**

To select TV station using program numbers "10" - "99".

For example: selecting program 12

\* Press the button "-/-" once

\* Then press the number "1" button, on screen will show "1-"

\* Then press the number "2" button, channel "12" will show.

#### **4. Three Digital Program Number**

To select TV station using program numbers "100" - "249".

For example: selecting program 120

\* Press the button "-/- /-/" twice

\* Then press the number "1" button, on screen will show "1--"

\* Then press the number "2" button, channel "12-" will show.

\* Then press the number "0" button, channel "120" will show.

#### **5. Previous Program Button (↶)**

Press (↶) button to select the previously viewed program number.

### **Child Lock Button**

Press the "LOCK" button on the remote controller, you will be required to enter the four-digit password and ask you to enter it again for confirmation.

After the Child Lock function is turned on, the machine will be locked at the current channel and cannot be switched over. If you want to turn the Child Lock function off, press the "LOCK" button again and enter the set password correctly to unlock it.

Note: There is a general password [4689] set for the machine.

### **Standby Button (⏻)**

\* Press the "⏻" button to switch OFF the picture and sound.

\* To switch on the TV from stand-by mode, just press any desired program number (0-9).

### **Mute Button**

 
Press the **Mute** button to switch OFF the sound, press once again to switch ON the sound.

### **Display Button**

Press the (⏏) button, the screen will be in TV screen display mode. When there is an operation menu on the screen, the menu disappears when this button is pressed.

### **AV Button**

For turn over between RF program mode and video mode (including AV1, AV2 or RGB mode).



### **PP Button**

This button is used to select one of the four picture modes: **USER**, **MILD**, **STANDARD** and **DYNAMIC**.



### **Effect Button (EFFE)**

You can switch over between four types of sound mode with this button: **USER**, **SPEECH**, **THEATRE** and **MUSIC**.



## **DVD PLAYER OPERATION**

### **Basic Operation**

1. Press **TV/DVD** button on the remote controller or **DVD** button on the TV set to turn on ( or off ) DVD .
  2. Press **OPEN / CLOSE** button to load disc into disc tray.
  3. Press **OPEN / CLOSE** button to close the tray.
- Hold the disc without touching either of its surfaces, position it with the printed title side facing up, align it with the guides, and place it in its proper position.

### **DVD Setup Mode**

- Setup Mode provides the menu for the configuration of **General Setup Page**, **Speaker Setup Page**, **Dolby Digital Setup**, **Video Setup Page** and **Preference Page**.
- Item selection in the Setup Menu is done by using the Navigation Arrows, **SETUP** button and the **OK** button.
- Press the **SETUP** button first, enter into **SETUP** menu, then press the **DIRECTION RIGHT** button, you can enter into the next Sub-menu.
- Press the **SETUP** button again to exit the Setup Menu,

## **1. General Setup**

### **TV Display**

#### • PS

 
This is selected when the DVD player is connected to a normal TV. Wide-screen images are shown on the screen, but with some parts cut automatically.

#### • LB

This is selected when the player is connected to a normal TV. Wide-screen images are shown on the screen, with black belt on the top and bottom.

#### • Wide


This is selected when the player is connected to a wide-screen TV.

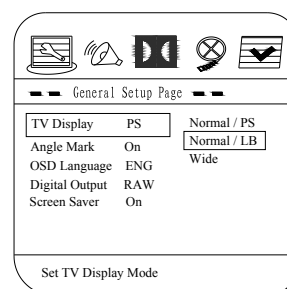

### **Angle Mark**

This only works when there is an angle mark on the disc. Select ON, the screen shows the mark when playing DVD.

 
- On
- Off

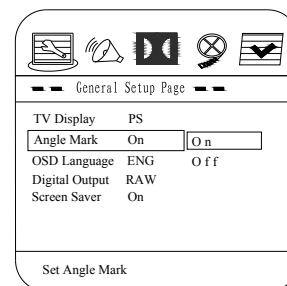

### **OSD Language**

This is used to select the OSD language.

 - English
- German
- Danish
- Swedish
- Spanish
- Portuguese
- Italian

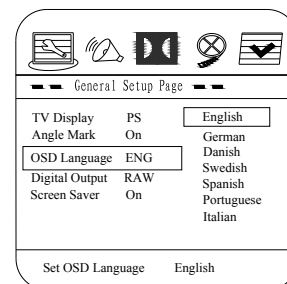

## Digital Output

This is used to set the audio output

- SPDIF Off

 
An analog surround sound format  
Is output through the back-panel  
Audio output connectors .

- SPDIF/ RAW

This surround sound format is output  
to a Dolby digital decoder through  
the optical and coaxial connectors.

- SPDIF/ PCM

This surround sound format is output  
to a PTS decoder through the optical  
And coaxial connects.

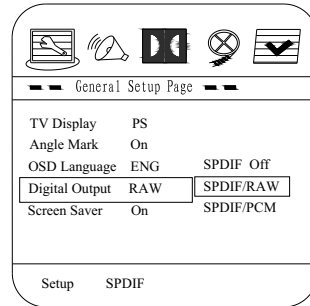

General Setup Page

TV Display	PS
Angle Mark	On
OSD Language	ENG
Digital Output	RAW
Screen Saver	On

SPDIF Off

SPDIF/RAW


SPDIF/PCM

Setup SPDIF

## Screen Saver

 Start the screen saver, the screen  
saver image will appear when the  
player stops or the picture is frozen  
for a few minutes. This saver can  
keep the screen from being damaged.

- On (Start the screensaver)
- Off (Remove the screen saver).

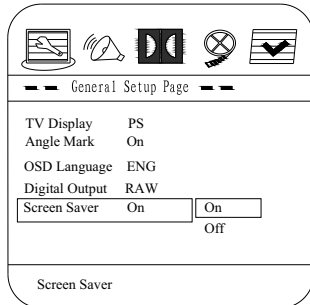

General Setup Page

TV Display	PS
Angle Mark	On
OSD Language	ENG
Digital Output	RAW
Screen Saver	On

On

Off

Screen Saver

## 2. Speaker Setup Page

 
### Downmix

- LT/RT

A disc recorded multi channel soundtrack,  
the output signal will be incorporated to left  
and right channel.

- Stereo

A disc recorded multi channel soundtrack,  
The output signal will be incorporated to stereo.

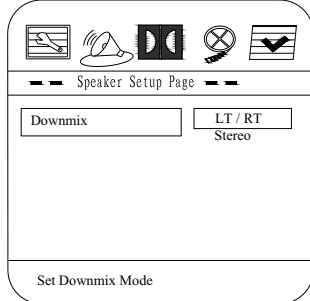

Speaker Setup Page

Downmix

LT / RT


Stereo

Set Downmix Mode

## 3. Dolby Digital Setup
 
### Dual Mono

This is used to select the Stereo ,L-MONO  
R-MONO and MIX-MONO.

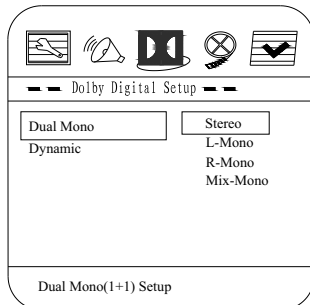

Dolby Digital Setup

Dual Mono

Stereo

Dynamic

L-Mono


R-Mono

Mix-Mono

Dual Mono(1+1) Setup

**Dynamic**

 
This option is used to set the compression ratio in order to control the sound (volume) contrast.

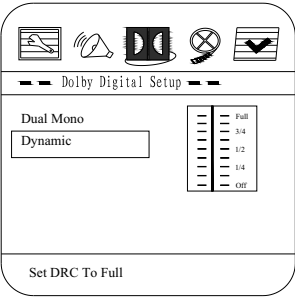

**4.Video Setup  
Component**

This option is used to set the video output.

 
- Off
- RGB

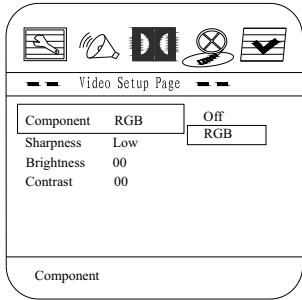

**Sharpness**


This option is used to set the sharpness level of the sharpness of the video output

 - High
- Medium
- Low

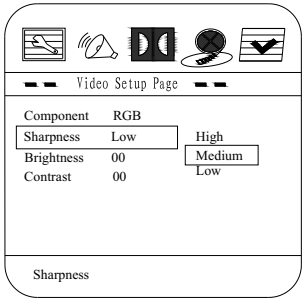


**Brightness**

 User can set the level of brightness for the image displayed. It is ranged from -20 to 20.

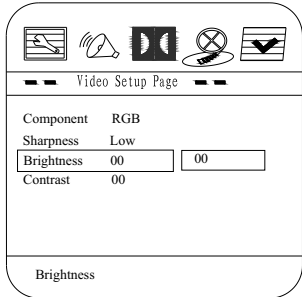

**Contrast**

 User can set the level of contrast for the image displayed. It is ranged from -16 to 16.

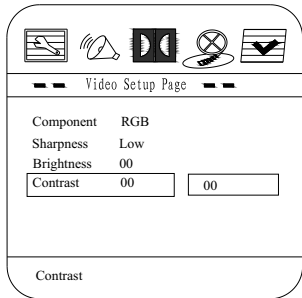

5.Preference Setup

You must press **STOP** twice to enter **Preference Page**

TV Type

- PAL  
This is selected when the player is connected to an PAL System TV.
- MULTI  
The player will set the TV system according to the disc in the tray.
- NTSC  
This is selected when the player is connected to a NTSC System TV.

Preference Page

TV Type	Multi	PAL
Audio	ENG	MULTI
Subtitle	ENG	NTSC
Disc Menu	ENG	
Parental		
Password		
Default		

Set TV Standard

Audio

If a language listed below is recorded on the disc, you can play the sound in such language. If not, the language recorded will be used.

- English
- German
- Danish
- Swedish
- Portuguese
- Spanish
- French
- Chinese
- Russian

Preference Page

TV Type	Multi	English
Audio	ENG	German
Subtitle	ENG	Danish
Disc Menu	ENG	Swedish
Parental		Portuguese
Password		Spanish
Default		French
		Chinese
		Russian

Preferred Audio Language

Subtitle

If a language listed below is recorded on the disc, you set the subtitle to be displayed in such language. If not, the language recorded will be used.

- English
- German
- Danish
- Swedish
- Portuguese
- Spanish
- French
- Chinese
- Russian

Preference Page

TV Type	Multi	English
Audio	ENG	German
Subtitle	ENG	Danish
Disc Menu	ENG	Swedish
Parental		Portuguese
Password		Spanish
Default		French
		Chinese
		Russian

Preferred Subtitle Language

Disc Menu

If a language listed below is recorded on the disc, you can set the Menu to be displayed in such language. If not, the language recorded will be used.

- English
- German
- Danish
- Swedish
- Portuguese
- Spanish
- French
- Chinese
- Russian

Preference Page

TV Type	Multi	English
Audio	ENG	German
Subtitle	ENG	Danish
Disc Menu	ENG	Swedish
Parental		Portuguese
Password		Spanish
Default		French
		Chinese
		Russian






Preferred Menu Language



Parental

When playing disc with parental lock function, you may select an Age Control Grade according to grade of disc and your own preference.  
For example, if PG is selected, DVD Video disc rated higher than the PG grade cannot be played.

- KID SAFE
- G
- PG
- PG 13
- P GR
- R
- NC 17
- ADULT
- OFF



Preference Page

TV TypeMulti

AudioENG

SubtitleENG

Disc MenuENG

Parental

Password

Default

1 KID SAFE

2 G

3 PG

4 PG 13

5 PGR

6 R






7 NC 17

8 ADULT

Set AGE Control

Password

User can change the password that is required when the user wants to change the Age Control Grade in the Parental Lock function.  
NOTE: (Preset password is 3308 )



Preference Page

TV TypeMulti

AudioENG

SubtitleENG

Disc MenuENG

Parental

Password

Default

Change

Change Password

OLD PASSWORD

 



 
NEW PASSWORD

CONFIRM PWD

OK

Default

User can load the original factory setting by choose RESET and press OK button .



Preference Page

TV TypeMulti

AudioENG

SubtitleENG

Disc MenuENG

Parental

Password

Default

Reset

Load Factory Setting

## DVD OPERATIONS

### Play Discs

1. Press the **OPEN/CLOSE** Button (▲) on the front panel and load the Disc on the tray.  
The label side should be facing upwards. For a Double-sided DVD Disc, put the disc with label A/1 up.
2. Press the **OPEN/CLOSE** (▲) button again to close the tray and the disc will be loaded.
3. The Disc will be played automatically.
  - If it is a DVD disc, it will show the Menu/Title Page on the screen.
  - If it is a CD, it will play the first track directly.
4. Press the **STOP** Button (■) if you want to stop the Disc playback. You can continue playback by pressing the **OK** button (on the front panel) or the **OK** button (on the remote controller) and it will start at the location where you have pressed stopped (Resume Play).
5. Press the **STOP** Button twice to have the Disc really stopped.

### Pause Mode

This function is applicable for DVD and CD audio.

- For DVD, the picture will become static.
  - For CD audio, it will become silent.
1. Press the **PLAY/PAUSE** (■) Button will cause the player to enter Pause mode.
  2. Press the **OK** Button or **PLAY/PAUSE** Button again will continue to Play mode.

### OSD Language

There are 7 OSD languages embedded in the DVD Player : English, German, Danish, Swedish, Spanish, Portuguese, Italian.

1. Press the **SETUP** button on the remote controller to enter the setup menu main page.
2. Press the Navigation Arrows (◀ ▶ ▲ ▼) to choose **General Setup Page**.
3. Go to the OSD LANG option and use the Navigation Arrows to do the selection.
4. Press **OK** button to confirm.
5. Press **SETUP** again to resume the Setup menu.

### DVD Menu Play

The DVD Menu Play function is only applicable for DVD movie. User can get the Casting information, Production History, Movie Introduction etc. directly through this function.

1. Press the **DVD MENU** Button on the remote controller to enter the Root Menu.
2. Use the Navigation Arrows (◀ ▶ ▲ ▼) or input the item index through the Number keys (0-9) to do the selection.
3. Press **OK** button to confirm the selection.

### Select with Number Button (0 - 9)

When using the Number Buttons as input, user can directly input the numbers, if want to enter two digits.

For example, to input the number '13', user has to press '1' and '3'.

- During a DVD movie playback, input through the Number Buttons will select the Chapter in the current title.
- When playing audio CD, Number Key press will command the player to access the track indicated.

### Audio Mode

This function is applicable for DVD and CD audio but with different effects.

- For a DVD disc, pressing the **AUDIO** Button will change the language of playback.

### Fast Play

This function is applicable for DVD and CD audio but with different effects. The **FAST FORWARD** (▶▶) key and **FAST BACKWARD** (◀◀) key are used to achieve fast play function.

- For DVD, there are 4 different levels of speed (2x, 4x, 8x, 16x). Every successive key press will increment the speed of quick play.

Note : Press **PLAY** Button at any stage will resume to normal speed.

- For CD audio, the FF/FR will perform quick rolling on the music output. However, once the FF/FR key press is released, the Playback will resume to normal speed.

### Slow Play

The Slow Forward is applicable for DVD, There are 4 steps of slow motion speed, 1/2, 1/4, 1/8, 1/16. Successive keypresses will decrement the playback speed.

Note : Press **Play** Key to switch back to normal playback speed.

### Repeat Mode

This function is applicable for DVD and CD audio but with different effects.

- For DVD disc playback, user can choose to repeat the current chapter or the current title. Subsequent key press of the **REPEAT** key can change between these two options.
- For CD, user can choose to repeat the current track or the whole disc (Repeat All). Subsequent key press of the **REPEAT** key can change between these two options.

## Repeat A-B

This function is applicable for DVD and CD audio. User can specify the repeating interval by marking the starting point and the end point.

1. Press the **REPEAT A-B** Button to mark the starting point (Playback will continue).
2. Press the **REPEAT A-B** Button to mark the end point. (The marked part will be repeated automatically)

Note : Press the **REPEAT A-B** Button during repetition will disable the Repeat mode.

## Subtitle

This function is only applicable for DVD disc. It can change the subtitle language shown on the screen.

Note : Number of subtitle available depends on the DVD disc.

## Angle

Some discs may have multiple viewing angles during production. The **ANGLE** button is to select the viewing angle shown on the screen.

Note : The number of Angle of View depends on the Disc.

## Goto

 
This function is applicable for DVD and CD audio. Through this function, the user can access a specific location or a specific track by key In the target time or the track number.

- In the DVD playback mode, the player provides two search modes : Search Chapter Time and Search Title Time.

1. Press the **GOTO** key to choose a search mode (Title time / Chapter time).
2. Input the target time through the Number keys (0-9) and the Player will jump to the target location immediately.

- In CD audio, user can only access the location in the current track.

1. Press the **GOTO** key to enter the Search Mode (there is only one mode in CD audio playback).
2. Input the target time through the Number keys (0-9) and the player will jump to the target location immediately.

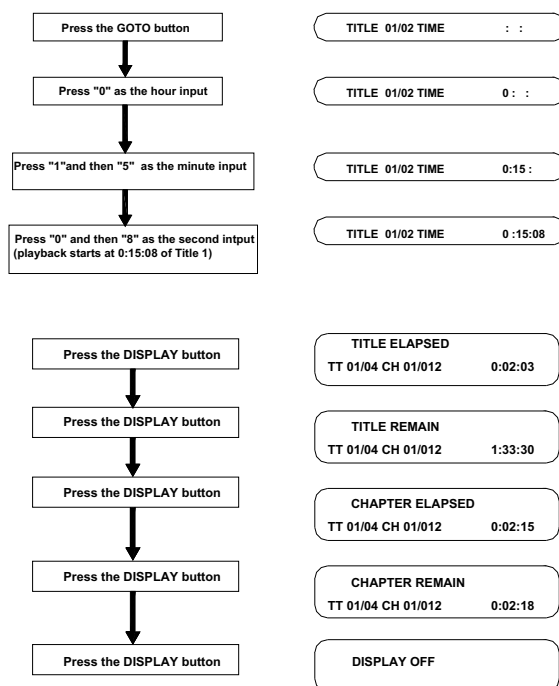

## Display (Remain Time)

This function is applicable for DVD only. It will display the timing information of the playback on screen.

- For DVD playback, subsequent key press on the DISPLAY key will show the Title Elapsed Time, Title Remain Time, Chapter Elapse Time and Chapter Remain Time one by one.

## Resume Play

This function is applicable for DVD and CD audio. During the disc playback, when the **STOP** Button is pressed once, the player will pause, then press the **OK** button enter the Resume Play mode. At this time, if the **OK** Button is pressed, the player will resume playback at the location where the **STOP** Button is pressed. If the **STOP** button is pressed (i.e. **STOP** Button is pressed twice), the player will be stop.

 
## Zoom

This function is applicable for DVD. User can enlarge and diminish a static picture or a moving picture by pressing the **ZOOM** key.

There are 6 levels of zooming (2x, 3x and 4x, 1/2x, 1/3x, 1/4x) and they can be achieved one by one through subsequent key presses on the **ZOOM** key.

NOTE: user can select the portion of the picture to be enlarged by using the Navigation keys (◀▶▶▶).

The function is only for the **2X, 3X, 4X**

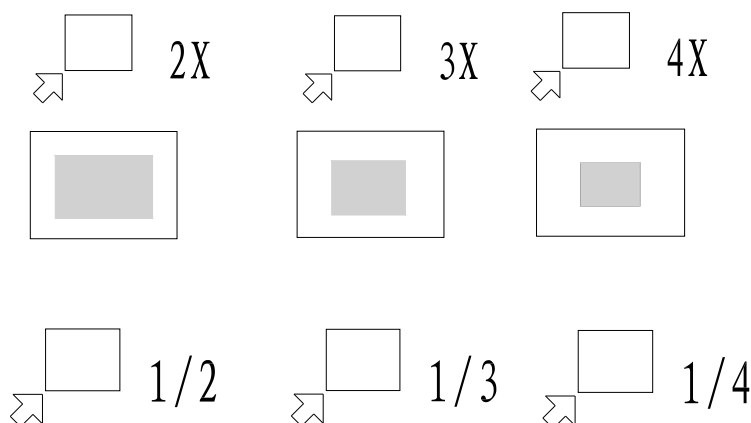

## Program Mode

This function is applicable for DVD and CD audio. User can assign the playback sequence according to his/her preference.

- For CD audio, user can assign the track sequence while for DVD disc, user can assign both the Title and Chapter sequence.

### CD

- Press the **PROGRAM** Key. The Program Sequence table will be shown on the screen.
- Enter the track numbers according to the user preference through the Number keys (0-9).
- After assigning the playback sequence, move the green highlight cursor to the **START** option by using the Navigation Arrows.  
Press **OK** button on the remote controller to confirm.

Program: Tracks(01-08)

01	--	06	--
02	--	07	--
03	--	08	--
04	--	09	--
05	--	10	--

EXIT NEXT

To remove the program:

- Press the **PROGRAM** Key to invoke the Program Menu.
- Move the green highlight cursor to the **EXIT** option by using the Navigation Arrows.
- Press **OK** button to confirm, you will exit the **PROGRAM** menu.

Program: Tracks(01-08)

01	01	06	--
02	03	07	--
03	--	08	--
04	--	09	--
05	--	10	--

EXIT START NEXT

### DVD

- Press the **PROGRAM** Key. The Program Sequence table will be shown on the screen.

Program: TT(02)/CH(-)

TT: CH	TT: CH
TT: CH	TT: CH
TT: CH	TT: CH
TT: CH	TT: CH
TT: CH	TT: CH

EXIT NEXT

- Enter the Title number with the Number keys (0-9) on the remote controller.

Program: TT(02)/CH(-)

TT:01	CH	TT: CH
TT: CH	TT: CH	
TT: CH	TT: CH	
TT: CH	TT: CH	
TT: CH	TT: CH	

EXIT NEXT

- Enter the Chapter number of the Title selected in the last step.

Program: TT(02)/CH(-)

TT:01	CH:02	TT: CH
TT: CH	TT: CH	
TT: CH	TT: CH	
TT: CH	TT: CH	
TT: CH	TT: CH	

EXIT START NEXT

- Repeat step 2 and 3 to input the sequence.

Program: TT(02)/CH(-)

TT:01	CH:02	TT: CH
TT:01	CH:01	TT: CH
TT:01	CH:01	TT: CH
TT: CH	TT: CH	
TT: CH	TT: CH	

EXIT START NEXT

- After assigning the playback sequence, move the highlight cursor to the **START** option by using the Navigation Arrows. Press **OK** on the remote controller to confirm.

Program: TT(02)/CH(-)

TT:01	CH:02	TT: CH
TT:01	CH:01	TT: CH
TT:01	CH:01	TT: CH
TT: CH	TT: CH	
TT: CH	TT: CH	

EXIT START NEXT

Note : The Program can be removed in the same ways as CD audio.

## MP3 Operation

This unit can support ISO9660 file system CD-ROM navigation. Multi-Media files can be played in the player, such as MP3.

### • Operation

Insert the MP3 disc into the tray. Navigation Menu will be displayed. The menu will show up the files in the root directory, and the MP3 files then be played automatically.

### Note

- \* Operations such as STOP, NEXT and PREVIOUS are similar to that of CD Audio disc playback
- \* Cross-folders playback is not supported and Program Mode is not applicable in MP3 disc playback.

### • Play Mode

User can change the Play Mode by pressing the repeat. There are five different play modes when playing mp3 disc.

### • LEFT/RIGHT

when playing MP3 disc.

#### 1. FOLDER

All the files in the current folder will be played once in sequence.

#### 2. SINGLE

The selected file will be played once in sequence.

#### 3. REPEAT

 
The selected file will be repeated.

#### 4. REPEAT FOLDER

All the files in the current folder will be repeated.

#### 5. Random

All the files in the current folder will be played randomly

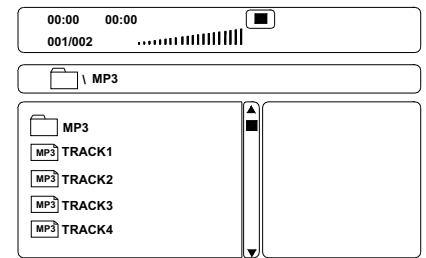

## Picture CD

The unit can also be used to navigate picture CDs. Insert a picture CD into the tray and The disc will be loaded automatically. If the disc type can be identified, the player will start showing the pictures one by one (Slide Show Mode).

### • Operations

During Slide Show Mode:

1. Press the **STOP** Button will shift to the Digest Mode in which 12 pictures will be shown on the screen each time.
2. Press the **PAUSE** Button will freeze the screen so that the current picture can be held for a long time. To resume the Slide Show Mode, press **OK** Button.
3. Press the **NEXT** Button on the remote controller will skip to the next picture.
4. Press the **PREVIOUS** Button on the remote controller will repeat the current picture.
5. When all the pictures have been displayed once, the player will enter the Digest Mode automatically.

## **SPECIFICATIONS**

### **TV SECTION**

Receiving Channels	
VHFL	CH 2 - 4
VHFH	CH 5 - 12
UHF	CH 21-69
Tuner Type	250Channel , VS TUNING

According to the channel frequency of CCIR, OIRT international standard and NTSC system standard, add CATV channels.

### **DVD SECTION**

Laser Wavelength :	655nm
Laser power :	Class 1
Signal System	PAL /output
Digital audio output	Coaxial digital output; pin jack

Stereo in DVD mode  
Mono in TV mode

### **GENERAL SECTION**

AC Power Input	AC 230V $\pm$ 10% ~50 Hz
AC Power Consumption	$\leq$ 85W
Audio Output	3W+ 3W
Dimensions	395 $\times$ 432 $\times$ 385 (mm)
Net Weight	15 Kg

This set incorporates PAL/SECAM BG, DK, I and NTSC playback modes with the factory default set to PAL operation. Should you need to connect an external PAL TV for viewing, you have to make sure the TV SYS is manually set to the PAL system, otherwise, the screen will become black & white or skipping may be found.

Region coding: All DVD discs are coded by the sales territory. Please note the player is factory set to region 2 coding (UK and Europe) and cannot be changed. Therefore discs purchased outside of UK or Europe cannot be played. This is in compliance with the DVD patent requirements.

## **Guide to trouble-shooting**

The following phenomena are not necessary faults, and the following checks should be performed first before asking a specialized person for repair. If the cause of fault cannot be found and corrected with this guideline, remove the power plug from the socket and have a specialized person to repair it.

Symptom	Inspection
No picture or sound	Is the fuse or breaker in the house OK? Is the power supply plug inserted? Is it in good contact? Is the system of the TV correct?
No picture but the sound is OK	Adjust brightness and contrast.
Picture is shown but the sound is not normal	Press the sound system button to select other sound system
Normal picture but no sound	Press the V (+) or Mute button several times.
Only picture with snow and noise	Adjust the indoor or outdoor antenna. Connect a proper antenna, and readjust the channel tuning with the Fine Tune.
No color	Is a color program being broadcasted? Are the hue and system correct? Readjust the channel tuning with the Fine Tune.
Small dots, lines or strips on the picture	They are usually caused by interference from cars, neon lights and electrical hair dryers. Adjust the antenna to minimize the interference.
Ghost	Usually caused by reflection from hills or high buildings nearby. Change the antenna direction or height. Better use outdoor antenna with good directivity
Color stain	If color stain appears after changing the angle of the TV set, turn its main power switch off and wait for at least 15 minutes before turning it on again.
Afterglow when turned off	It is normal to have an afterglow on the screen for 1-3 seconds after the power to the TV set is cut off, and it will not affect the CRT.

**ALL RIGHTS RESERVED**  
**COPY RIGHT DENVER ELECTRONICS A/S**



**[www.denver-electronics.com](http://www.denver-electronics.com)**